



Operation


- 1. Switch
Touch on/off button, all zones on/off, Blue when playing. Yellow when off.
Once turn on, the default setting is under brightness control mode
Touch zone button Z1/Z2/Z3/Z4 separately over 2 seconds, which will turn ON/OFF separately .
The backlight blue is ON for the zone, yellow is OFF for the zone.
- 2. Save and recall
Save: Touch color slider to get a color
Hold any button of S1 or S2 over 2 seconds under 4 zones work together
The light flick means successfully saved.
Recall: Short touch button S1 or S2 →Recall the color saved.

Safety & Warnings

- 1) The product shall be installed and serviced by a qualified person.
- 2) IP20. Please avoid the sun and rain. When installed outdoors, please ensure it is mounted in a water proof enclosure.
- 3) Always be sure to mount this unit in an area with proper ventilation to avoid overheating.
- 4) Please check if the output voltage of any LED power supplies used comply with the working voltage of the product.
- 5) Never connect any cables while power is on and always assure correct connections to avoid short circuits before switching on.
- 6) Please ensure that the cable is secured tightly in the connector
- 7) For update information please consult your supplier.

TW TOUCH CONTROLLER DMX

Manual

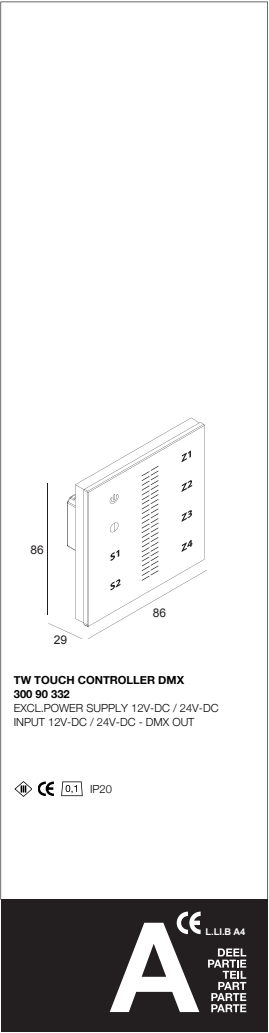

TW TOUCH CONTROLLER DMX



Feature


- Backlight
- Glass interface(White & Black)
- Touch sensitive
- Adjust brightness & color temperature




Parameter

Input Voltage	Output	Size
12-24V-DC	DMX512 Signal	86x86x29.1


Product Size

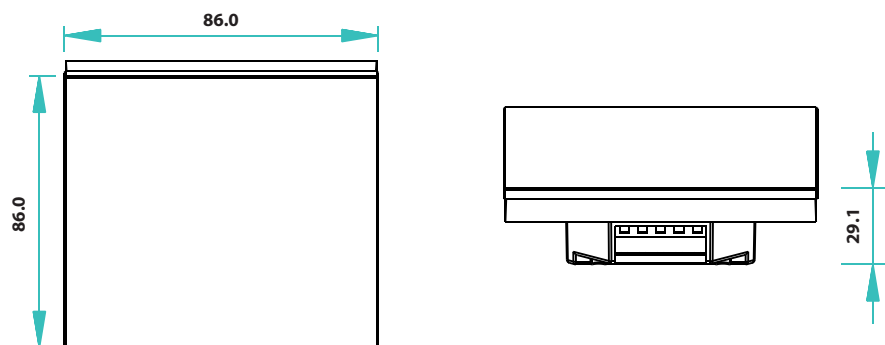

Installation

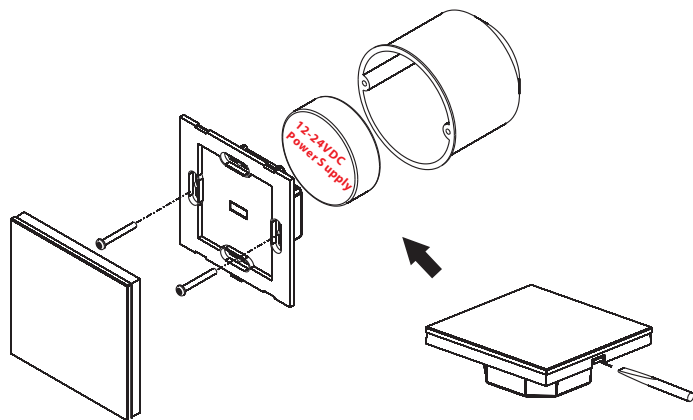

Wiring diagram

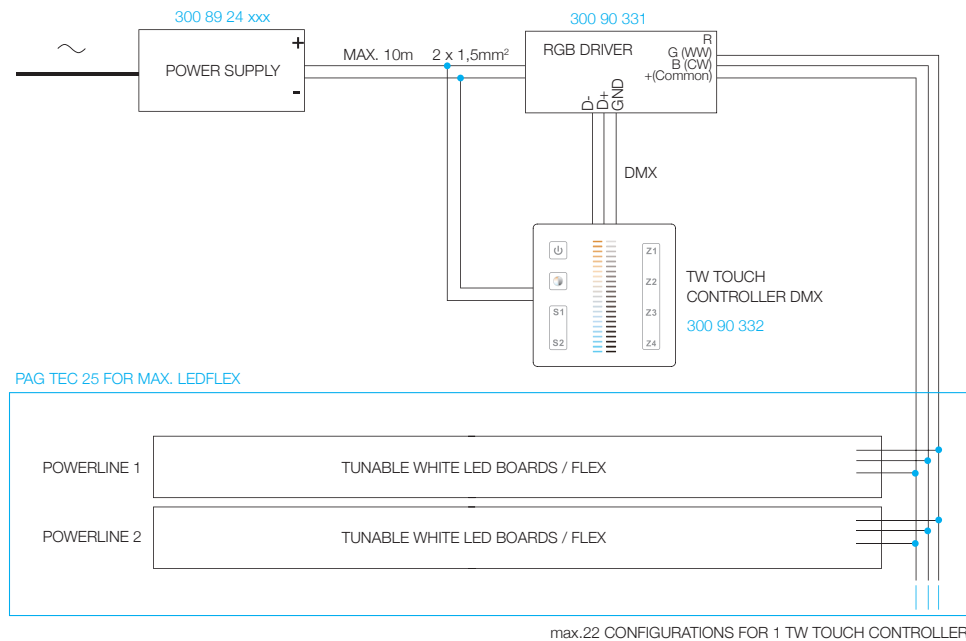

Description of buttons

