


PUT S6 SOFTENING LENS


DEEL
PARTIE
TEIL
PART
PARTE
PARTE

A

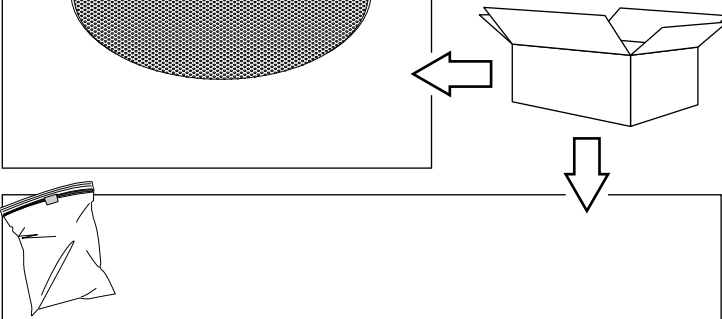





PUT S6 HONEYCOMB
12820 0050

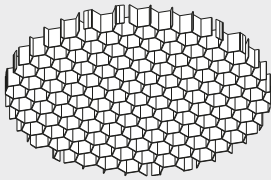

PUT S6 SOFTENING LENS
12820 0090

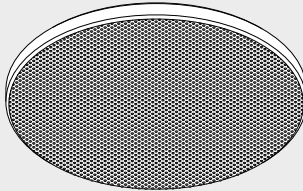

1

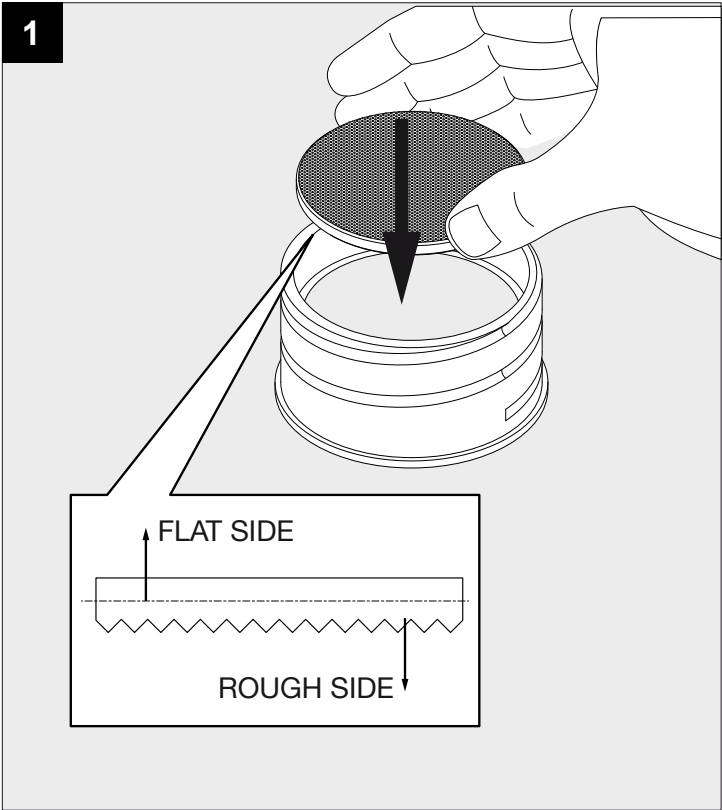

2

